

PARTS FOR LATERAL PACKER



No-return grout valve



Assembly for setting the cracking pressure of the No-Return Grout valves on the packer. Also used to verify leaks on the packer side of the hoses (vacuum and pressure)



Ball transfer



Screws for housing extension



Adaptor for transducer to FPT



O-ring for housing extension (push-on model)



O-ring for screw type Adaptor



Logiball 3-6 type A



SS bands for lateral plug and rubber band



Screw type adapter for lateral packer



Female threaded adapter for screw type with inflation



Band-it tool



Pressure gauge 0-10R30, 2.5' dia.

PARTS FOR LATERAL PACKER



Anchoring trolley for 8'' lateral packer with motor

Watertight motor:

For 6'': Motor 0-24 volt dc

For 8'' to 12'': Motor 0-90 volt dc

For 15'' & up: Motor 0-130 volt dc



3'' rubber wheel



4'' rubber wheel



Liquid silicone



 
Repair Kit for lateral plugs




5' long set of hose with npt adaptor




Quick disconnect adaptors
 3/8'' FPT x 3/8'' quick
 1/2'' FPT x 1/2'' quick

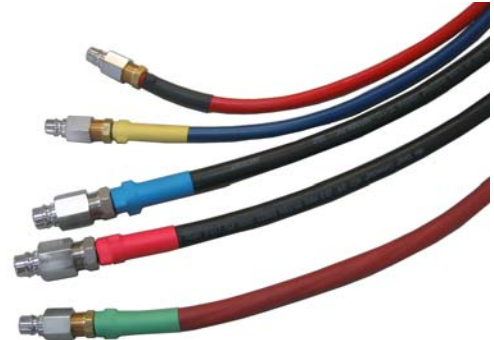

 
5' long set of hoses with quick disconnect

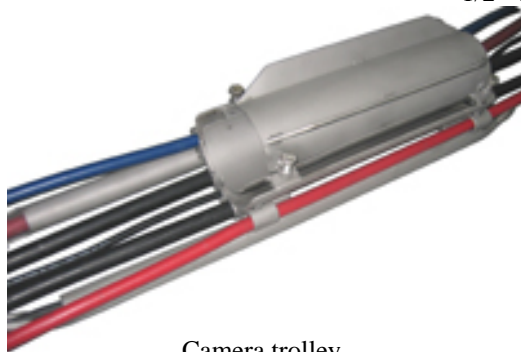

 Camera trolley.
 Available for 6'', 8'', & 10 '' lateral packer

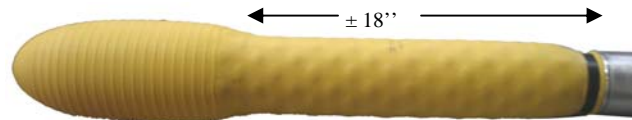

 Lateral grouting plug 36'' long for 6'' laterals

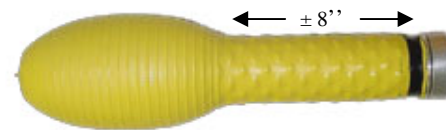

Lateral grouting plug 24'' long for 4'' laterals

Various lengths up to 38' available for 4, 5 & 6 inch laterals.